

## **PA-28**


### **Data Sheet**





Control Ability	Dual Channel Individual Control	
Input Voltage	12VDC	
Output Power	12VDC	
Current	30A (15A Per Channel)	
Kit Includes	2 Hand Remotes, 1 Control Box, Remote Batteries	
Remote Functions	Up, Down, Pause (Momentary & Non-Momentary)	
Remote Battery Type	12V Alkaline Battery	
Size (L x H x W)	4.5" x 1.3" x 3.3"	
Weight	1.05 lbs	
Warranty	18 Months	

# **Dimensions**




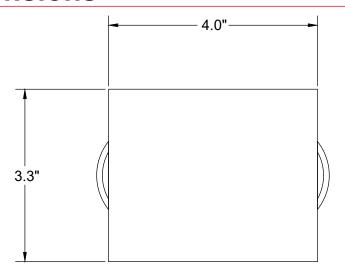


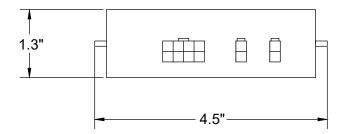

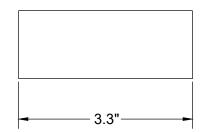

# **Wiring Diagram**

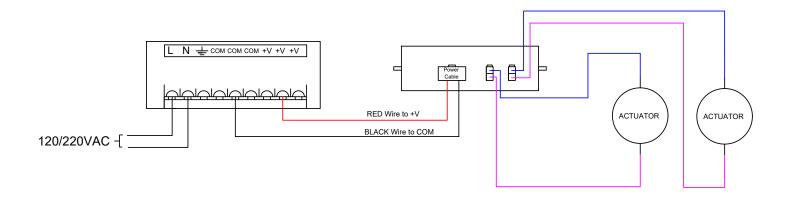

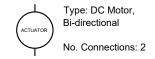

# **Momentary/Non-Momentary Mode**



#### Momentary Mode

- •Ensure the Jumper S1 on the PCB is connected
- •Hold UP to extend the actuator, let go to stop the actuator
- •Hold DOWN to retract the actuator, let go to stop the actuator

#### Non-Momentary Mode

- Ensure the Jumpers S1 on the PCB is disconnected
- •Press UP to extend the actuator, Press UP again to stop the actuator
- Press DOWN to retract the actuator, Press DOWN again to stop the actuator
- If DOWN is pressed while the actuator is extending, it will reverse direction and begin to retract

## **Remote Synchronization Process**



- •Open the control box and press the white button. the blue LED with turn on
- Press any button on the remote and the LED will turn off
- •The remote is now saved to the control box
- •A maximum of two remotes can be saved to one control box